


Wood Screws (WS)

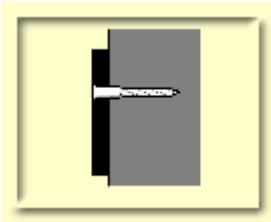

Holes are drilled through the plaque and countersunk to accept a flat head wood screw.

Recommended Uses

For semi-permanent mounting to:

- Wood walls
- Wood Doors
- Benches

Installation

Using plaque holes as a template, drill a small starter hole in the wood. For added security apply some clear silicone or Liquid Nails (both sold by any home improvement retailer) in the hole and to the back of the plaque (away from the edges).

Mount wood screws through the plaque holes and tighten screws with a screwdriver.

Rosettes may be provided depending on the size of the plaque – these attach either by screwing into the heads of the wood screws (large plaques) or in the case of smaller plaques, the woodscrew mounts through a hole in the rosette itself.